

nedis

Doorstep Window Alarm

Battery Powered | 3x AAA/LR03 | 85 dB | White

Brand: Nedis | Article number: ALRMD30WT | Product EAN number: 54 12810329465

Inner Carton EAN: 54 12810394630 | Outer Carton EAN: 54 12810378715



Nedis.com

This alarm is operated by entering a four-digit pin code on the keypad located on its front.

The system has three operating modes.

The alarm mode is available in two settings.

1. Normally the alarm is set in 'Away' mode meaning an entry and exit delay is activated.
2. It's also possible to activate the alarm in 'Home' mode meaning it activates an exit delay of 15 seconds and has an entry delay of 0 seconds.
3. In 'Chime' mode a chime sounds immediately when the alarm is triggered.

In addition, by activating panic mode a loud alarm will sound right away to draw attention. 'Panic' can be activated while the alarm is in chime, away, home or even disarmed.

Features

- Easy to operate with a 4-digit keyboard
- 3 adjustable modes - doorbell, burglar alarm or panic alarm
- Works on batteries or with an optional AC/DC adapter
- Adjustable exit and entry delay time

Read more online



Nedis.com/ALRMD30WT

