

nedis

VHS Converter

Conversion: VHS-C to VHS | Plug and play | Black

Brand: Nedis | Article number: VCON110BK | Product EAN number: 5412810337385

Inner Carton EAN: 5412810397617 | Outer Carton EAN: 5412810397624



Nedis.com

Insert a VHS-C tape into the Nedis VCON110BK VHS-C cassette converter to record or watch it with a standard VHS video recorder. Insert an AA battery (not included) to automatically open the front and load or unload the tape. Please be aware that 8 mm tapes are not compatible with VCON110BK. Only those carrying the VHS-C logo can be used.

When using the VCON110BK in combination with a VHS player and VHS-C

cassette, please keep the following information and precautions in mind:

- Over the years, your VHS player and VHS-C tape will have accumulated dust and grease that's not always visible to the eye, which can damage tapes inserted or jam your recorder prior to use. We would suggest using a VHS cleaner on your equipment.

Features

- Makes it possible to watch your old video tapes again – simply insert the VHS-C cassette and start using it
- Motorised – the lid opens once moving the open/close switch
- Plug and play – easy to use

Read more online



Nedis.com/VCON110BK

